



IVIS Inspection System

- ◆ Large 300 x 300mm base
- ◆ Independent top and base lighting for incident and transmitted light
- ◆ 10.5" flat LCD display with remote control
- ◆ Rack and pinion focusing
- ◆ 9cm "Z" travel to accommodate larger objects
- ◆ Zoom lens provides 20x to 120x screen magnification
- ◆ Adaptor to increase range from 30x to 180x
- ◆ Range of accessories to customise product to specific requirements

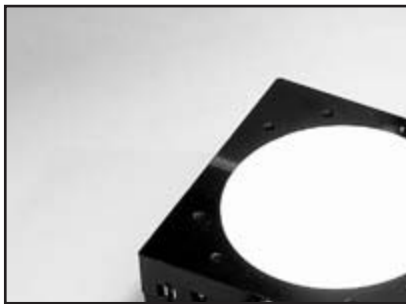

Optional X-Y stage provides 30 x 30mm of movement to 1 μ M resolution

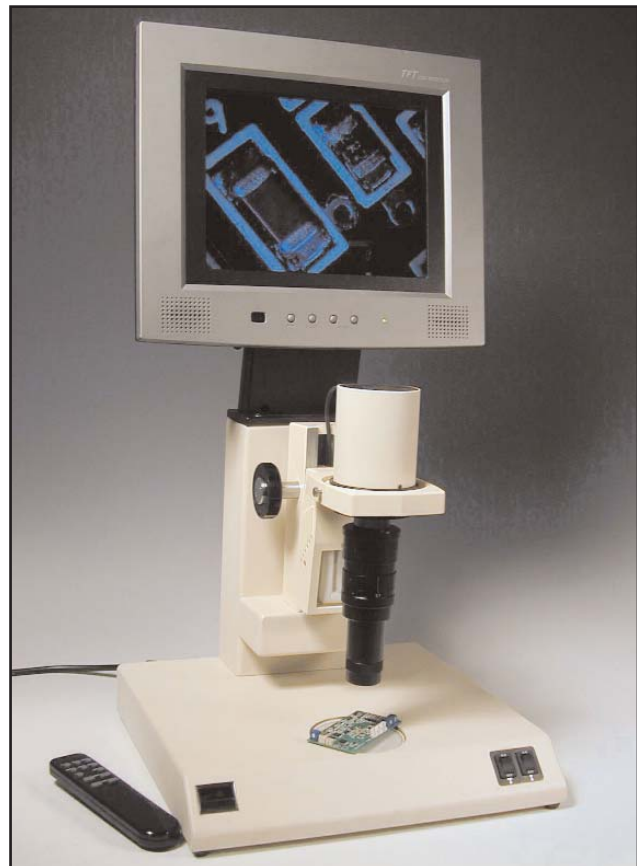

IVIS Industrial Inspection System

The IVIS Industrial Vision Inspection System is designed to provide the facility to quickly view components for visual faults using a CCTV system and integrated LCD monitor. The unit is fitted with a 6x zoom lens providing an on screen magnification from 20x to 120x, with an optional adaptor this can be increased from 30x to 180x.

Both top (incident) and bottom (transmitted) lighting is included, the lamps are independently operated, allowing suitable lighting for all inspection applications.

The flexibility of this instrument allows inspection of thin objects such as blank circuit boards and assemblies up to 9cm high.

Order Details

Part No.	Description
50E02057	IVIS Industrial Visual Inspection System complete
50E02058	X - Y stage with 30mm movement and digital micrometers

*All goods are supplied under our Standard Conditions of Trade
Products and specifications are subject to change without notice*